

PARTS CATALOG


Model

ACCESS 7000 i

décembre 23, 2024 4:53 PM

ACCESS 7000 i

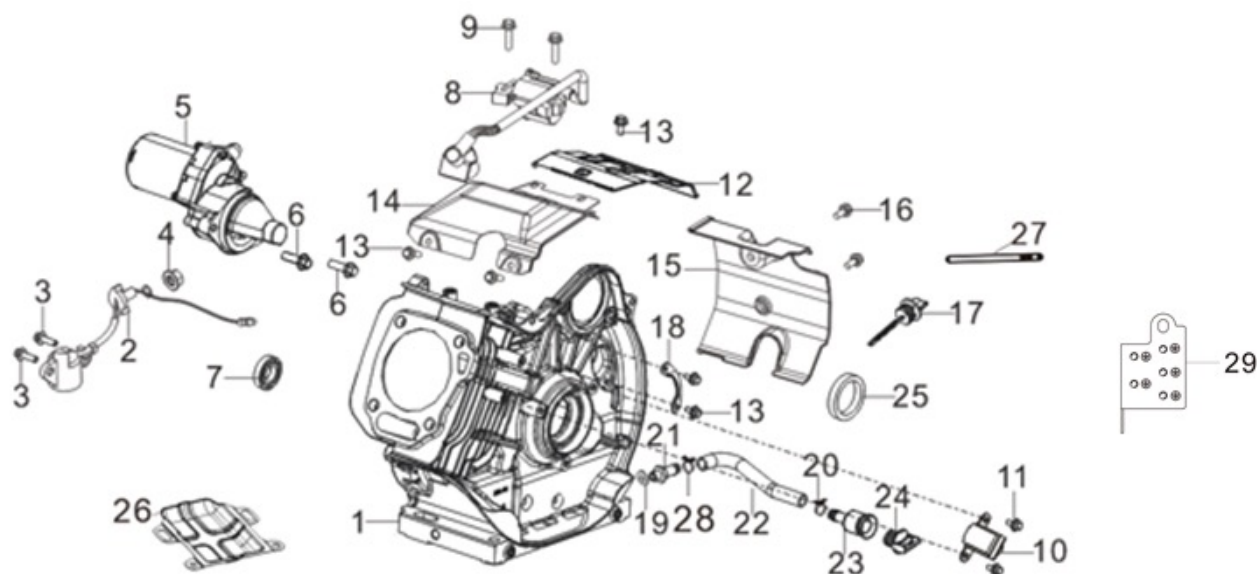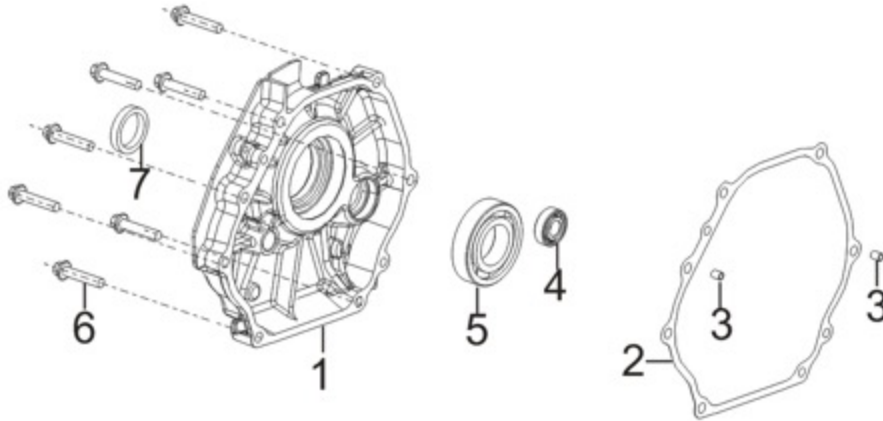
FIG.1 CRANKCASE. / GEAR ASSY, GOVERNOR (E01)



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
E01-1	11310-Z1E0110-0B00	CRANKCASE SUBASSEMBLY.	1	
E01-2	37060-Z080120-0000	SENSOR, ENGINE OIL	1	
E01-3	90001-0616-01A0	BOLT	2	
E01-4	90305-Z010210-01A0	HEXAGON NUT WITH FLANGE	1	
E01-5	30300-Z980120-0000	STARTING MOTOR ASSEMBLY	1	
E01-6	90001-0825-01A0	BOLT	2	
E01-7	90548-0202-CLA0	DEEP GROOVE BALL BEARING	1	
E01-8	30400-Z1E0310-0000	COIL, IGNITION	1	
E01-9	90001-0625-01A0	BOLT	2	
E01-10	30130-Z1E0110-0000	TRIGGER ASSY.	1	
E01-11	90001-0516-01A0	BOLT	2	
E01-12	28118-Z1E0110-0000	WIND BLOCK	1	
E01-13	90001-0612-01A0	BOLT	5	
E01-14	19304-Z1E0110-0000	SHROUD, CYLINDER BODY	1	
E01-15	19351-Z1E0110-0000	SHIELD, CRANKCASE REAR	1	
E01-16	90001-0616-01A0	BOLT	2	
E01-17	15010-Z080131-Q5A0	DIPSTICK SUBASSEMBLY, OIL	1	
E01-18	30002-Z1E0110-0000	CLAMP, MAGNETO WIRING	1	
E01-19	90408-Z010510-00A0	FLAT WASHER - GRADE A	1	
E01-20	90685-D160-0EA0	PIPE CLAMP	1	
E01-21	90689-Z430211-00A0	JOINT, FUEL TUBE	1	
E01-22	11011-Z1E0110-0000	TUBE, OIL DRAIN	1	
E01-23	90689-Z430110-00A0	JOINT, FUEL TUBE	1	
E01-24	15030-Z010130-Q5A0	PLUG SUBASSEMBLY, ENGINE OIL	1	
E01-25	90682-Z0J0110-00A0	SEAL, OIL	1	
E01-26	19306-Z1E0110-00A0	DEFLECTOR, CRANKCASE AIR	1	
E01-27	90684-Z010310-00A0	WIRE CLIP	1	
E01-28	90685-D160-0EA0	PIPE CLAMP	1	
E01-29	31303-YGC0110-01B0	BLOCK, TERMINAL	1	

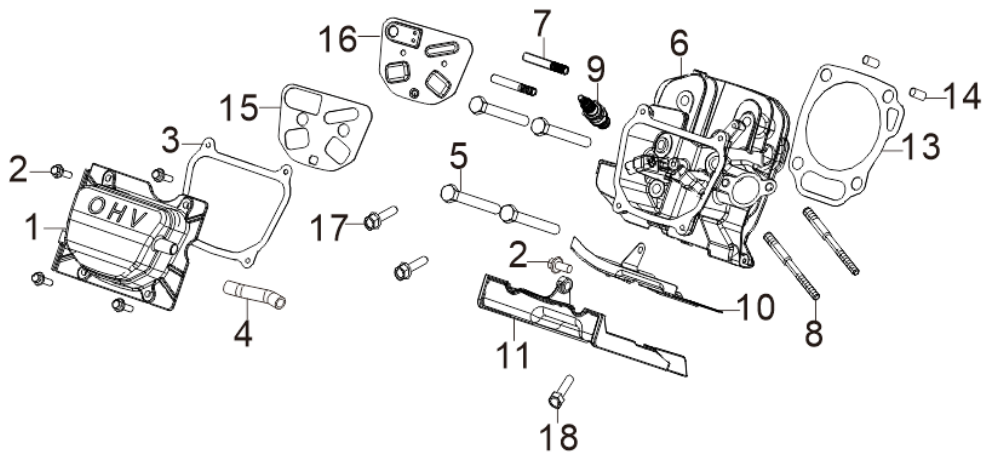
ACCESS 7000 i

FIG.2 COVER SUBASSEMBLY, CRANKCASE (E02)

[illegible]

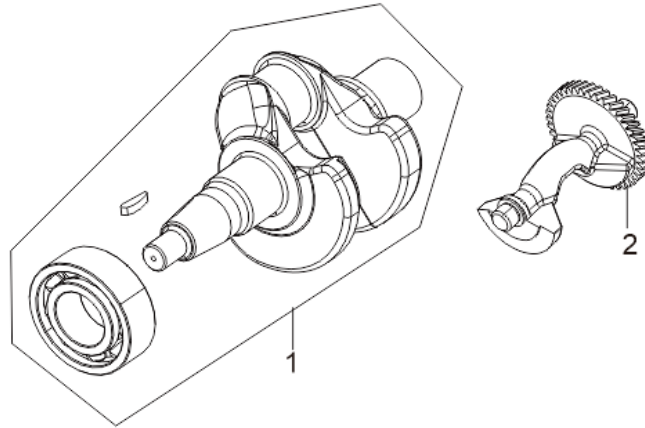
ACCESS 7000 i

FIG.3 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK (E03)

[illegible]

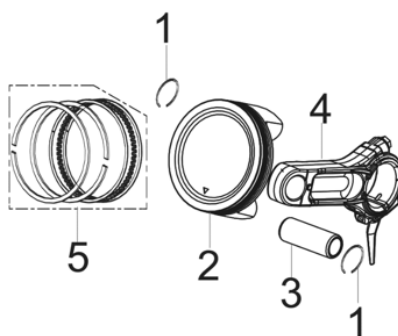
ACCESS 7000 i

FIG.4 ROD,CRANKSHAFT CONNETING (E04)

[illegible]

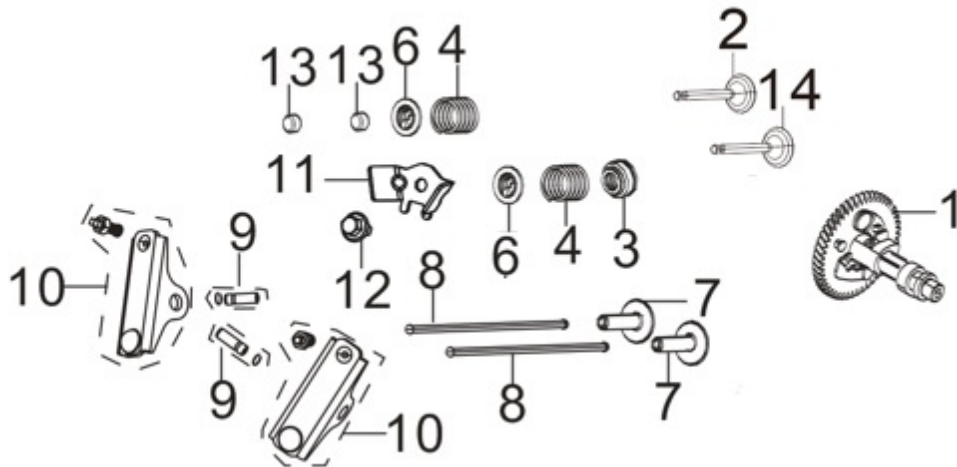
ACCESS 7000 i

FIG.5 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E05)

[illegible]

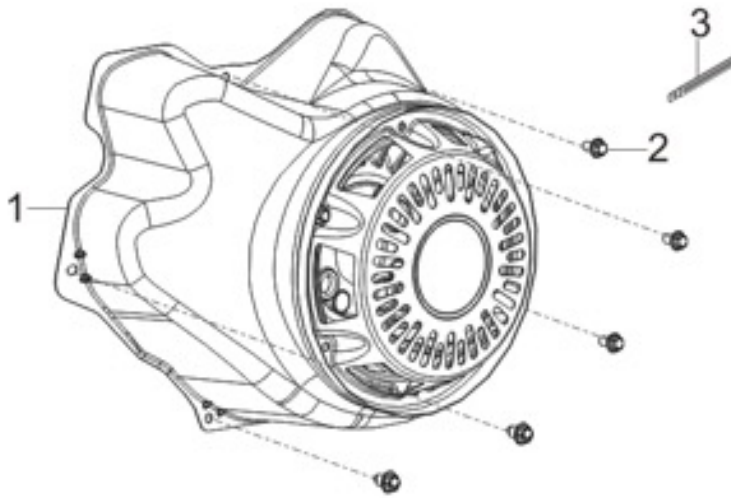
ACCESS 7000 i

FIG.6 TRAIN, VALVE / CAMSHAFT SUBASSEMBLY (E06)

[illegible]

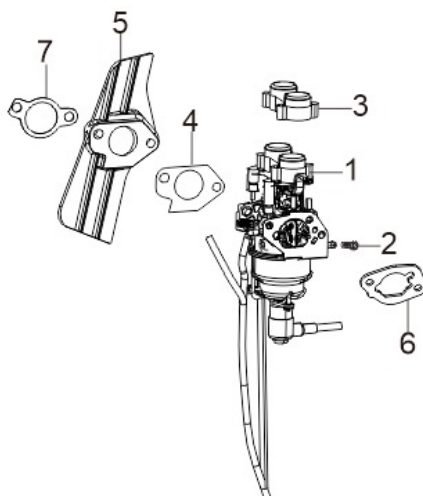
ACCESS 7000 i

FIG.7 STARTER,RECOIL (E07)

[illegible]

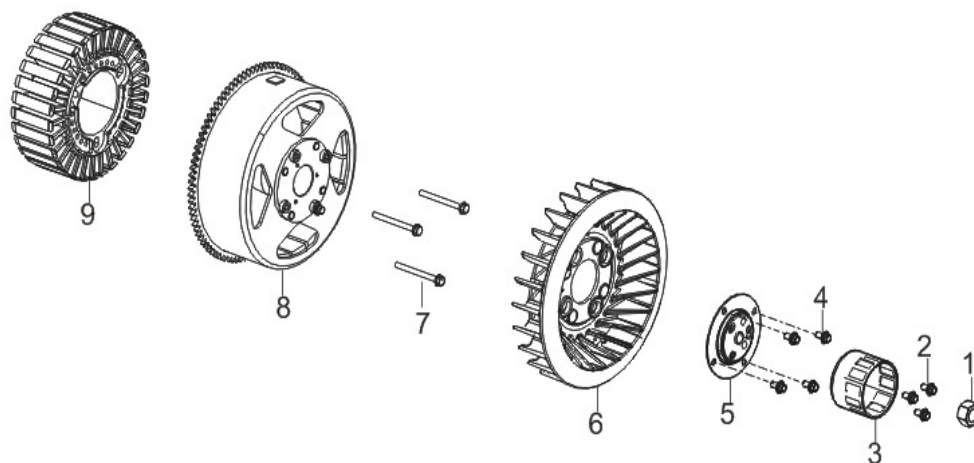
ACCESS 7000 i

FIG.8 CARBURETOR ASSY. (E09)

[illegible]

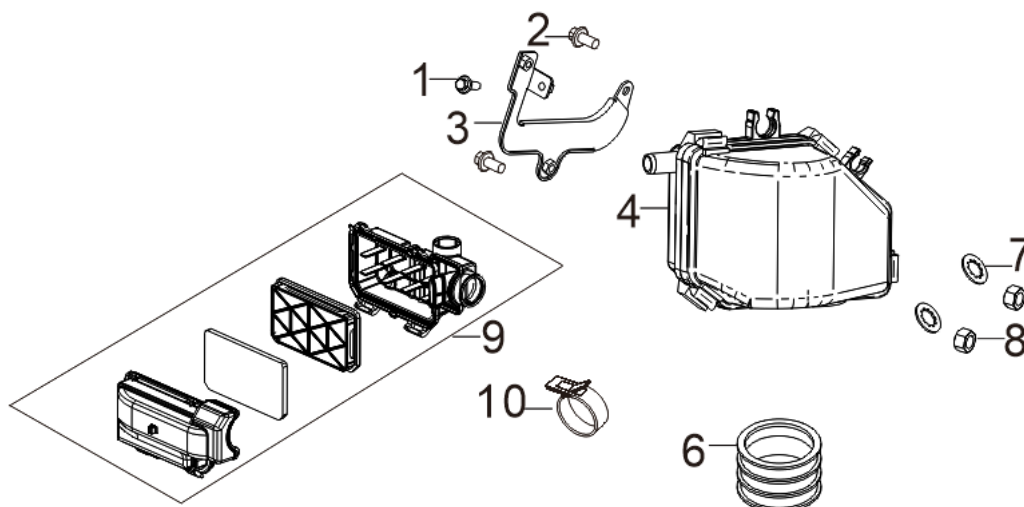
ACCESS 7000 i

FIG.9 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

[illegible]

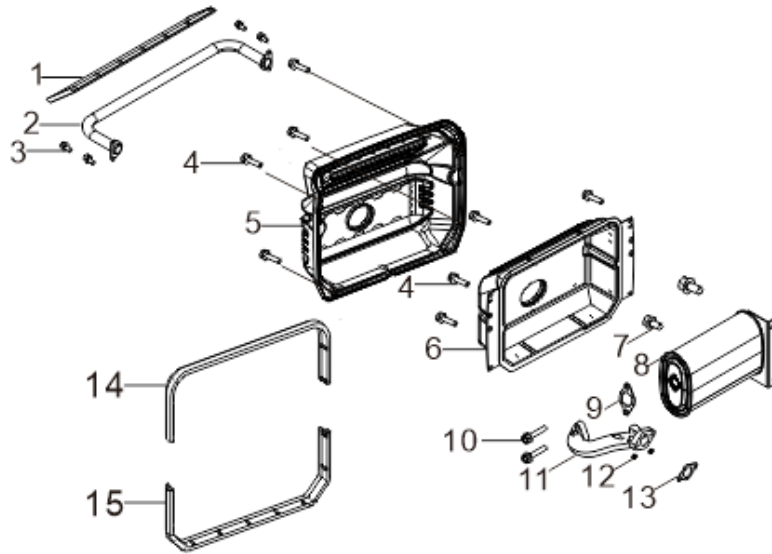
ACCESS 7000 i

FIG.10 AIR CLEANER (F01)

[illegible]


ACCESS 7000 i

FIG.11 MUFLER ASSY (F02)

[illegible]

ACCESS 7000 i

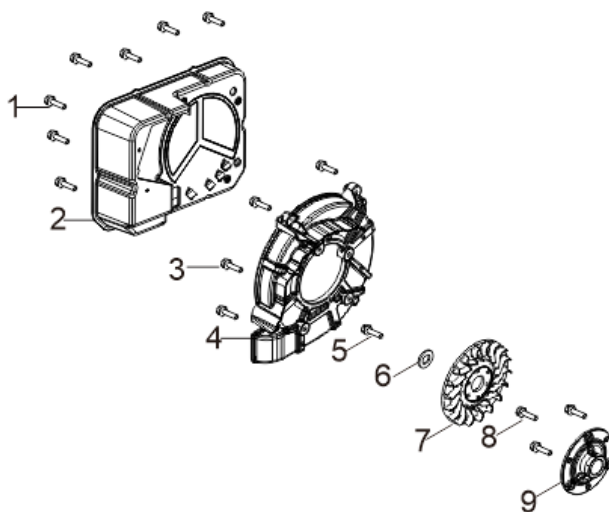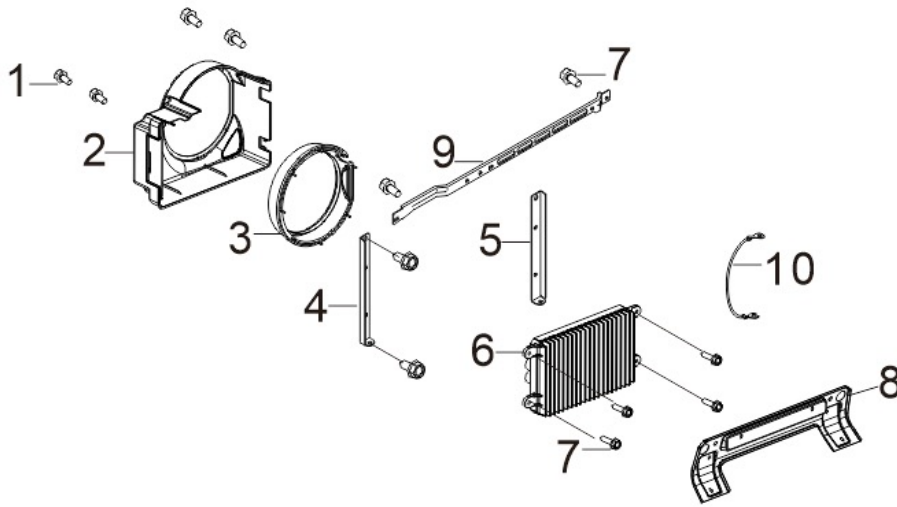
FIG.12 MUFFLER ASSY. (F03)



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
F03-1	90001-0616-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	6	
F03-2	18003-YFA0111-H7A0	COVER, MUFFLER INNER	1	
F03-3	90001-0825-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4	
F03-4	28110-YFA0110-00A0	SHROUD	1	
F03-5	90002-1030-01	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	1	
F03-6	90408-Y030110-0100	FLAT WASHER - GRADE A	1	
F03-7	19352-YFA0110-00A0	IMPELLER	1	
F03-8	90001-0612-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	3	
F03-9	13515-YFA0110-0000	TRAY, IMPELLER SETTING	1	

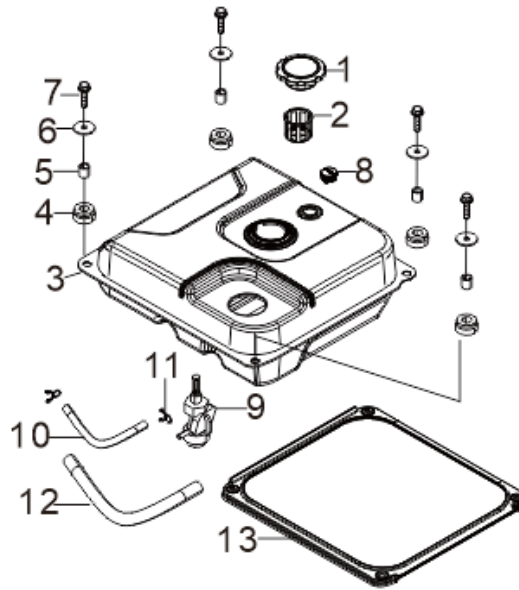
ACCESS 7000 i

FIG.13 MUFFLER ASSY. (F04)

[illegible]


ACCESS 7000 i

FIG.14 TANK ASSY, FUEL (F05)

[illegible]

ACCESS 7000 i

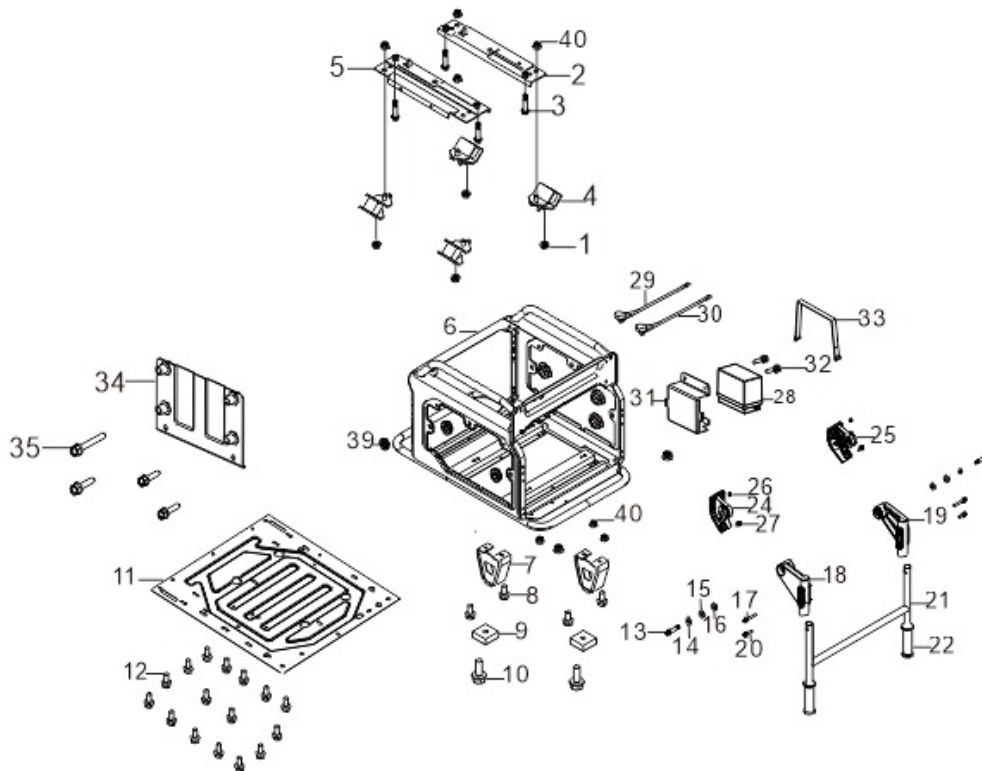
FIG.15 FRAME, ENGINE (F06) 1/2



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
F06-1	90305-0800-31A0	HEXAGON NUT WITH FLANGE	8	
F06-2	51002-YFA0110-H7A0	ENGINE FIXED BOTTOM PLATE	1	
F06-3	90002-1040-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4	
F06-4	51005HYN40110-00A0	CUSHION, ENGINE FRAME	4	
F06-5	51002-YFA0210-H7A0	ENGINE FIXED BOTTOM PLATE	1	
F06-6	51100-YGC0210-H7A0	FRAME ASSY, ENGINE	1	
F06-7	51016-YGC0110-H7A0	SUPPORT ENGINE FRAME SHOCK ABSORPTION	2	
F06-8	90001-0816-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4	
F06-9	51014HY940110-00A0	SEAT, ENGINE FRAME SHOCK ABSORPTION	2	
F06-10	90001-0616-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2	
F06-11	51143-YGC0110-H7A0	PLATE BOTTOM	1	
F06-12	90001-0612-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	16	
F06-13	71116-YFA0110-01A0	COUPLING BOLT	2	
F06-14	90412-YBW0110-Q2A0	FLAT WASHER	2	
F06-15	90412-YBW0210-01A0	FLAT WASHER	4	
F06-16	90419-YBW0110-H7A0	DISC WASHER	4	
F06-17	90001-0845-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2	
F06-18	54122-YFA0111-0BA0	HANDLE TUBE CONNECTING SEAT 2	1	

ACCESS 7000 i

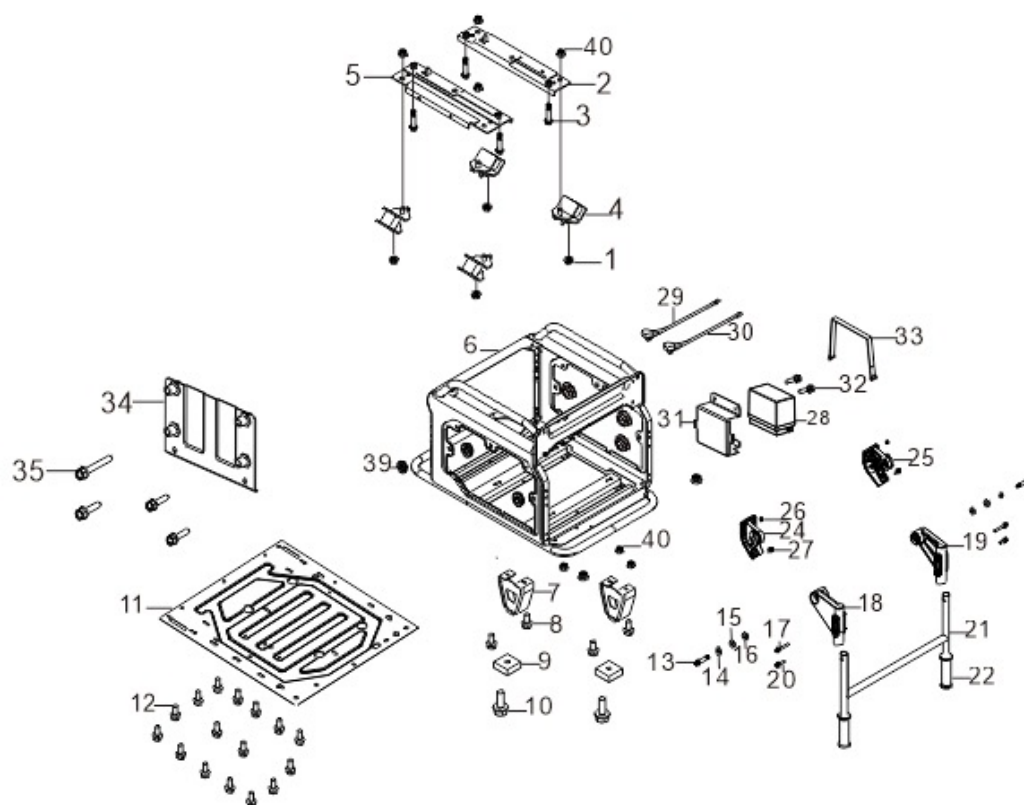
FIG.15 FRAME, ENGINE (F06) 2/2



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
F06-19	54122-YFA0211-0BA0	HANDLE TUBE CONNECTING SEAT 2	1	
F06-20	90001-0810-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2	
F06-21	54110-YGC0110-H7A0	HANDLE TUBE ASSY	1	
F06-22	54101-Y020210-00A0	SLEEVE, HANDLE RUBBER	2	
F06-24	54113HYGC0110-00A0	SEAT, HANDLE TUBE CONNECTING	1	
F06-25	54113HYGC0210-00A0	SEAT, HANDLE TUBE CONNECTING	1	
F06-26	90305-0800-33A0	HEXAGON NUT WITH FLANGE	2	
F06-27	90007-0825-A3A0	BOLT	2	
F06-28	31110-Y030610-00A0	BATTERY	1	
F06-29	31112HYH30111-00A0	WIRE, ANODE	1	
F06-30	31114HYH30310-00A0	WIRE, CATHODE	1	
F06-31	31130-YGC0210-H7A0	CASE, BATTERY	1	
F06-32	90001-0612-03A0	BOLT	2	
F06-33	31115-YBW0110-00A0	BAND, BATTERY	1	
F06-34	17003-YFA0110-H7A0	SUPPORT ATR CLEANER	1	
F06-35	90001-0620-01A0	BOLT	4	
F06-39	16601-Y2V0210-00A0	SLEEVE, FUEL TANK RUBBER	6	
F06-40	90306-1000-31A0	BOLT	4	

ACCESS 7000 i

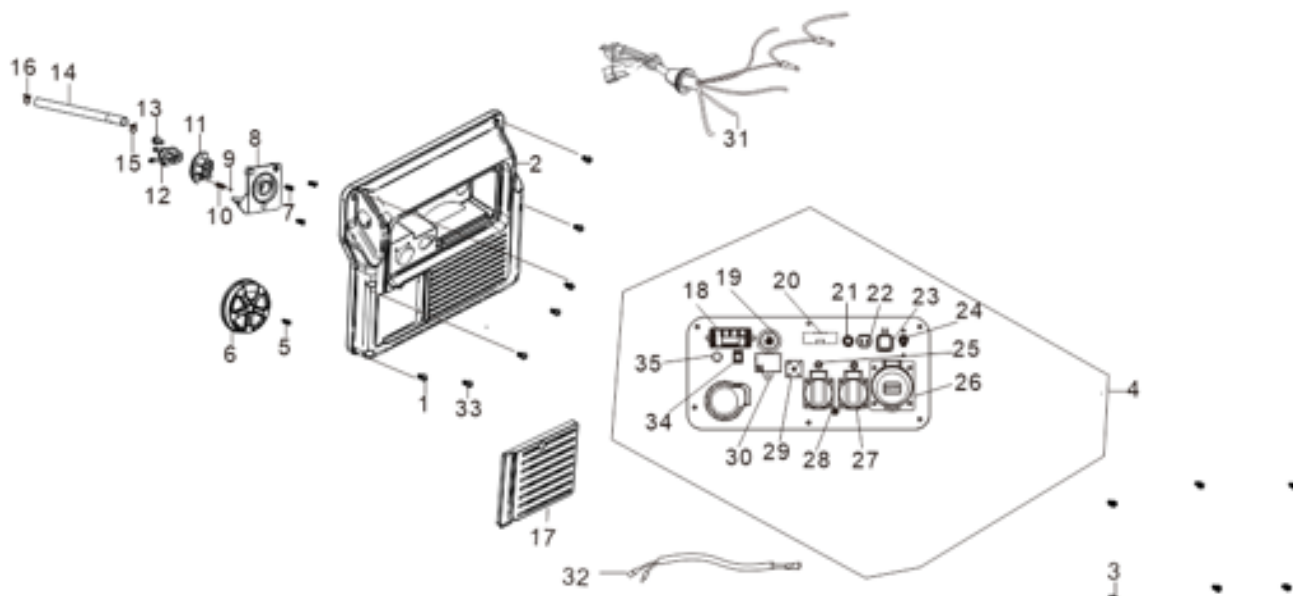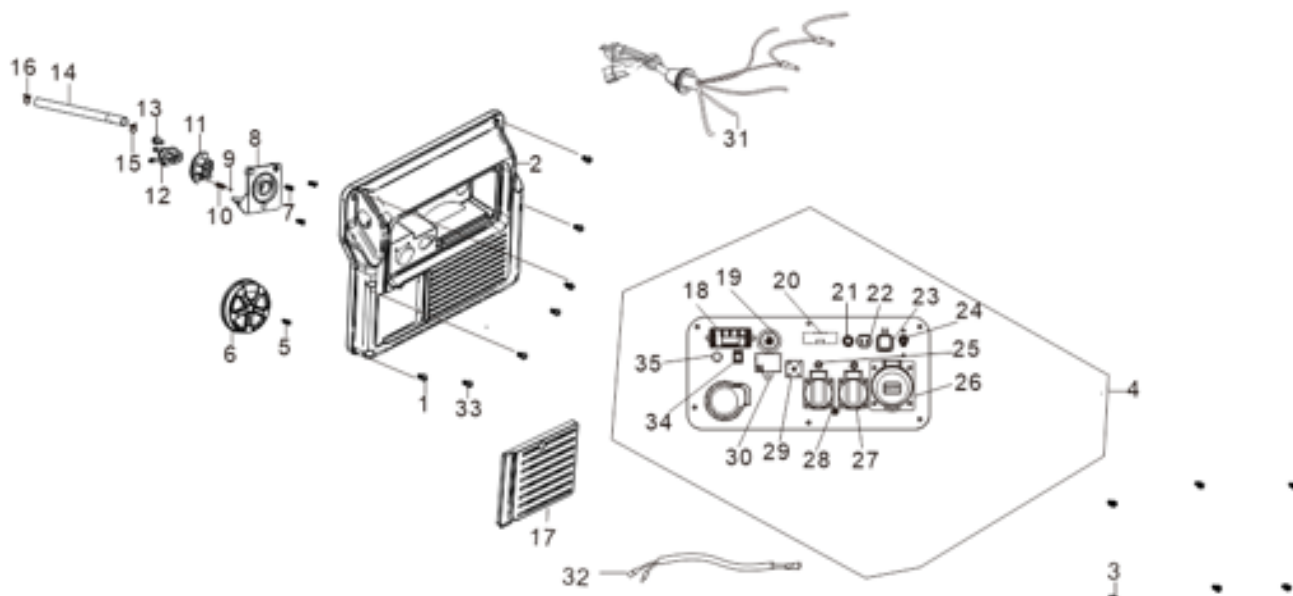
FIG.16 PANEL SUBASSEMBLY, CONTROL (F07) 1/2



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
F07-1	90001-0620-03A0	HEXAGONAL STEP BOLT	6	
F07-2	35680-YGC0110-Q200	SEAT, PANEL	1	
F07-3	90103-0512-53A0	CROSS-RECESSED PAN HEAD SCREW	6	
F07-4	35610-YN51210-H7A0	PANEL SUBASSEMBLY, CONTROL	1	
F07-5	90103-0416-51A0	CROSS-RECESSED PAN HEAD SCREW	1	
F07-6	35643-Y5V0110-Q2A0	KNOB	1	
F07-7	90129-0416-01A0	CROSS-RECESSED COUNTERSUNK HEAD TAP- PING SCREW	3	
F07-8	35160-YN50210-00A0	SWITCH SUBASSEMBLY	1	
F07-9	90543-0500-00A0	BALL, STEEL	1	
F07-10	16527-Y2V0210-00A0	SPRING, STOPPER ADJUSTING	1	
F07-11	94111-Y2V0410-00A1	COVER PLATE	1	
F07-12	16750-Y2V0141-00A0	COCK ASSY, FUEL	1	
F07-13	90001-0612-01A0	BOLT	1	
F07-14	90686-YBW0310-00M0	TUBE, FUEL	1	
F07-16	90685-Z120110-00A0	PIPE CLAMP	2	
F07-17	31123-YGC0110-Q2A0	BATTERY COVER	1	
F07-18	35632-YBW0210-0000		1	
F07-19	35220-Y3Y0110 -0000	STARTING SWITCH	1	
F07-20	30008-YN50110-0000	CONTROL MODULE	1	
F07-21	31234-Y020110-0000	PROTECTOR, OVERCURRENT	1	
F07-22	35619-Y2V0110-0000	SOCKET SUBASSEMBLY, D.C	1	
F07-23	35619-Y9T0210-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	1	
F07-24	35645-Y120110-0000	BREAKER, SINGLE-POLE CIRCUIT	1	
F07-25	31234-YCK0110-0000	PROTECTOR, OVERCURRENT	2	
F07-26	35614-YCK0110-0000	SOCKET SUBASSEMBLY, POWER SUPPLY	1	

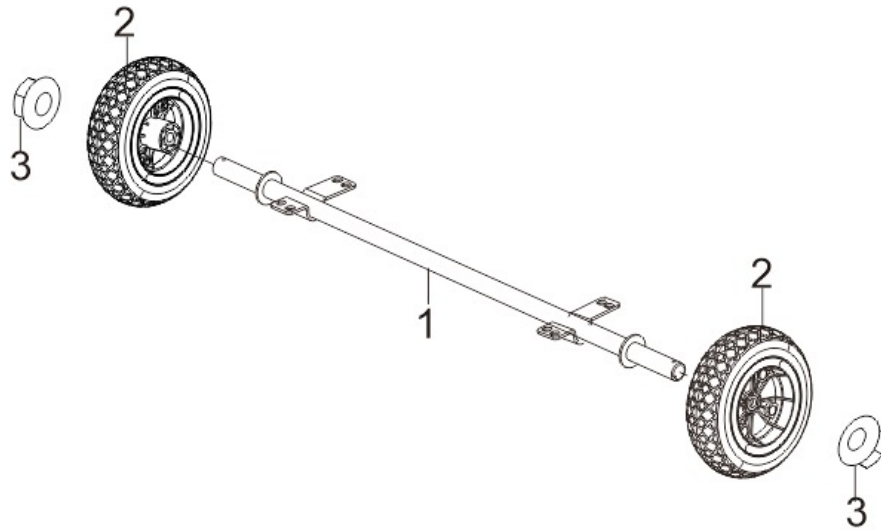
ACCESS 7000 i

FIG.16 PANEL SUBASSEMBLY, CONTROL (F07) 2/2

[illegible]


ACCESS 7000 i

FIG.16 WHEEL ASSY, FRONT (F08)

[illegible]

ACCESS 7000 i

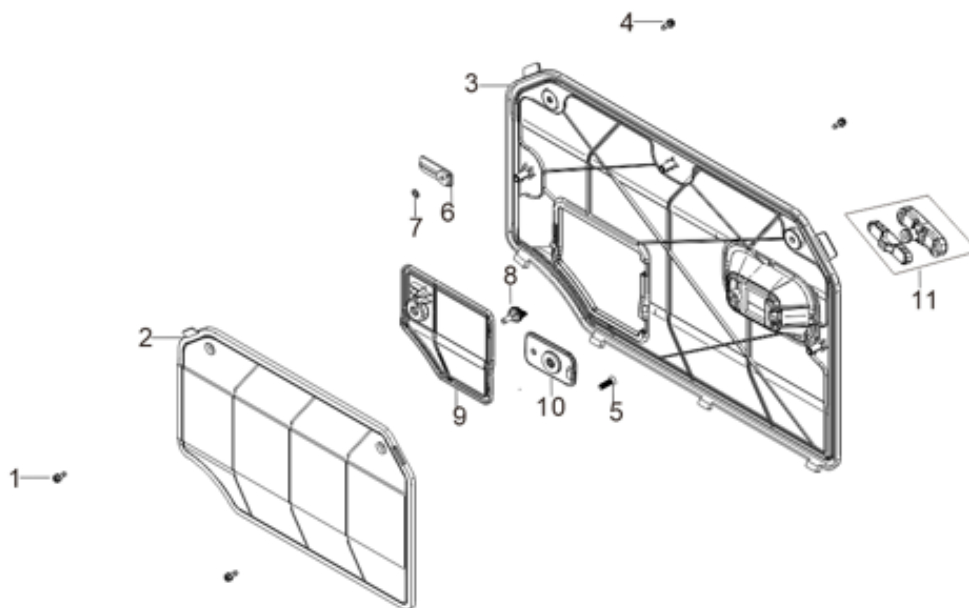FIG.18 (F31)



REF.NO.	PARTNO	DESCRIPTION	Q'TY	
F31-1	90001-0612-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2	
F31-2	80092-YGC0110-QGA0	LEFT HOUSING COVER PLATE	1	
F31-3	80096-YGC0110-QGA0	RIGHT APPEARANCE COVER PLATE	1	
F31-4	90001-0612-03A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2	
F31-5	90104-0512-53A0	BOLT	1	
F31-6	24329-YCF0110-Q2A0	STOPPER	1	
F31-7	37073-Y2V0110-00A0	SPRING CLAMP	1	
F31-8	80105-YB00110-Q2A0	SPARK PLUG ACCESS DOOR KNOB	1	
F31-9	51197-YGC0110-QGA0	RIGHT ACCESS DOOR	1	
F31-10	28004-YB00110-Q2A0	GUIDE SUBASSEMBLY, STARTING ROPE	1	
F31-11	28210-Y2V0110-00A0	HANDLE, RECOIL STRATER CABLE	1	

www.wormsentreprises.com



ZAC de Lamirault
39 rue de Lamirault, 77090 Collégien, FRANCE
TEL. +33 (0) 1 64 76 29 50
FAX +33 (0) 1 64 76 29 99

Service SAV et Garantie
After Sales and Warranty Service
TEL. +33 (0) 1 64 76 29 80
FAX +33 (0) 1 64 76 29 88